




208331 - Asta rulli centrale Multi Matic 1.400 E=15 con 3 funghi argento

Disegni tecnici

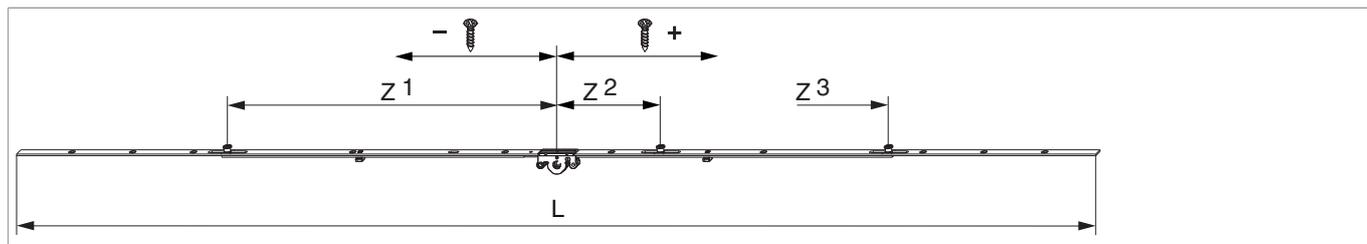

	L				Nº
argento	1.400	1.420	15	1.001 - 1.400	10
					208331

Tabella posizionamento viti

Nº		1	2	3	4	5	6	7	8	9	10	11	12
208331	10	-640	-560	-480	-270	-70	70	270	480	560	640		

Tabella punti di chiusura


Nº		Z1	Z2	Z3	Z4
208331	3	-435	135	435	

Dime

			Nº
Dima forature per fori martellina MM	per punta 3 mm	1	203861
Dima forature per fori martellina MM	per punta D=3 mm e D=12 mm	1	203862

208331 - Asta rulli centrale Multi Matic 1.400 E=15 con 3 funghi argento


Quote della scatola cremonese

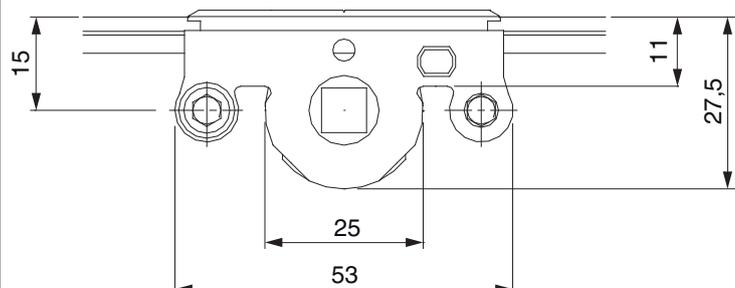


- Larghezza fresata per scatola cremonese \varnothing 12 mm
- Per fissaggio maniglia utilizzare viti SPAX \varnothing 5 mm o viti M5.

Schema di foratura

Per serramenti in legno

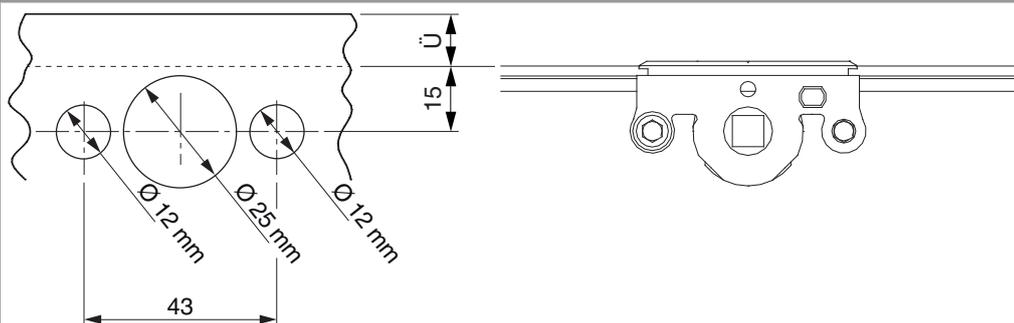

Per serramenti in PVC e alluminio

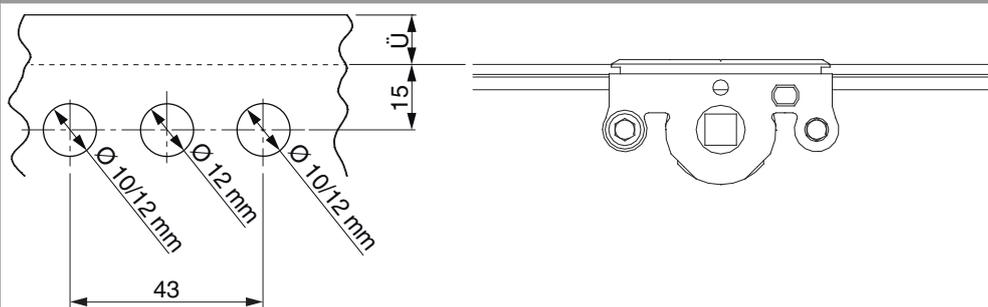

208331 - Asta rulli centrale Multi Matic 1.400 E=15 con 3 funghi argento

Regolazione pressione

